


BASIC SET-UP GUIDE

1 Unpack the telephone

Remove the cordless handset, charger base and all components from the packaging.

Remove the protective plastic from front of the charger and handset.

Remove the printed tag from underneath the charger.

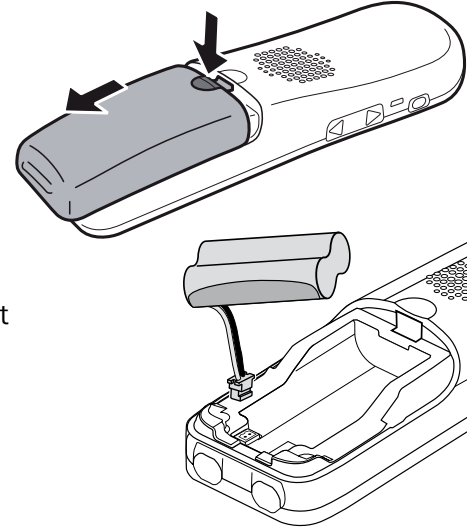

2 Install batteries in the cordless handset

Remove the battery cover from the back of the handset by pressing on the notch and sliding the cover down and off.

To connect the battery pack, insert the connector into the jack located inside the handset as shown (the connector will only fit one way). Push until it clicks into place.

Tug gently on the wires to make sure the connection is secure.

Place the battery pack into the battery compartment and replace the cover by sliding up and into place. Do not attempt to remove the batteries from the white plastic casing.


3 Connect the power cord

Find the power adapter.

Turn the charger upside down and connect into the socket marked **DC IN 9V**.

Plug the adapter into your wall socket (standard 240V power) and turn on power at the wall.

AC adapter to
power socket

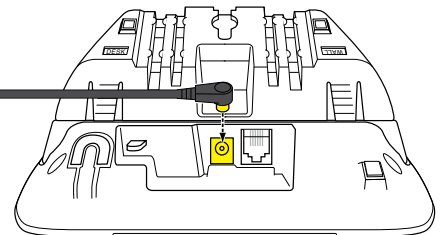


4 Connect the telephone cord

Find the telephone cord. Connect the telephone line by inserting one end into the charger at the socket marked **TEL LINE**.

Insert the other end into your standard wall telephone connection.

to wall
telephone
connection

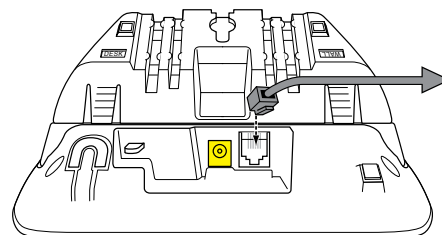


BASIC SET-UP GUIDE

5 Charge the handset

Place the cordless handset into the charger cradle. A red charge light illuminates, the display should activate and a battery icon will animate to indicate the handset is charging.

Charge the handset for at least 15 hours before initial use.

If the handset does not charge	Remove and replace the handset, ensuring it is properly seated in the cradle
	Check the power adapter connection.
	Make sure power is switched on at the wall

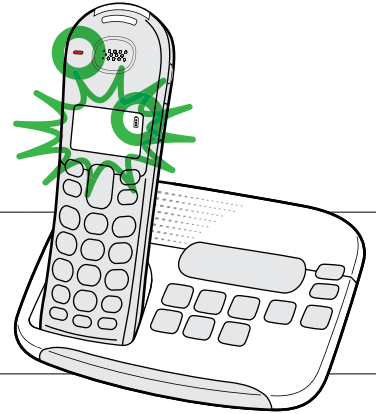

6 Test the handset connection

Pick up the handset and press **TALK**.

You should hear a dial tone, and the handset display should say **TALK**.

Press **TALK** again to hang up.

If you cannot get a dial tone or the handset display says CHECK TEL LINE	Check the telephone line is properly inserted, both in base and wall socket
	Try an alternative telephone wall socket
	If you continue to experience difficulty, contact your local telephone provider

If there is a lot of noise or static	See page 29 of the Owner's Manual for tips on avoiding interference
---	---

When you hear a dial tone, make a quick test call.

Press **TALK** to hang up.

7 Setting the day and time

Setting the date and time on the any handset will set it on all handsets/bases.

Remove the handset from the cradle.

Press **MENU/OK** to open the menu screen.


Use Volume \blacktriangle buttons to move the selector bar to **DATE & TIME**.

Press **MENU/OK** again to confirm your selection.

Use telephone keypad to select the date and time. Use Volume \blacktriangle buttons to select **AM** or **PM**, and press **MENU/OK** to confirm your selection. This returns you to the Main menu.



As an example of using the telephone keypad (to enter the date, hour and minutes: to enter 27 February 2013 - 5:35pm, press on keypad '2', then '7', then '0' and '2' (for February), then '1' and '3' (for the year), then '0', then '5', then '3' then '5' then \blacktriangle (to select AM or PM) and **MENU/OK**.

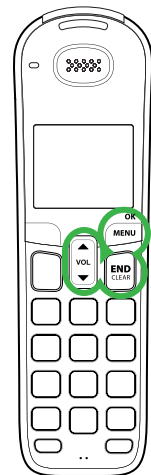Press **END/CLEAR** to exit the menu screen.





BASIC USER GUIDE


1 Using the cordless telephone

Make a call	Dial the number, then press TALK/FLASH
Answer a call	Press TALK/FLASH <i>To set the handset to automatically answer on pick-up, see page 12 of the Owner's Manual</i>
Hang up a call	Press END/CLEAR or return the cordless handset to the charger cradle
Put a call on hold	Press MENU and use the  buttons to select HOLD/TRANSFER press MENU to select <i>If you leave a call on hold for longer than 2 min 50 sec, it will automatically be disconnected.</i>
Return to a call on hold	Press TALK/FLASH
Lock the keypad	Remove the handset from the cradle. Press and hold  (for at least 2 seconds) Repeat this process to unlock the keypad



2 Adjusting the volume

To adjust the ringer volume of the handset	Remove the handset from the cradle. Press the Volume  buttons to scroll through volume settings The handset display will show OFF , LOW , MEDIUM or HIGH
To adjust the ringer volume of the charger base	On the charger, press the Volume + or - buttons to scroll through volume settings The display will show 0 (Off), 1 (Low), 2 (Medium) or 3 (High)
To adjust the earpiece volume	When the phone is in use, press the Volume  buttons

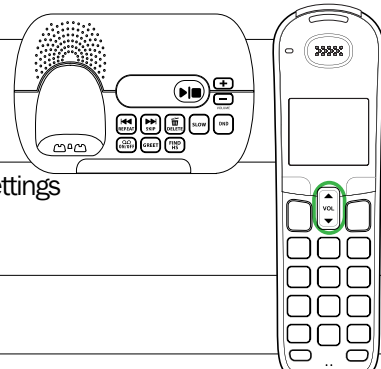


3 Using the audio boost

You can increase volume in the earpiece for normal calls and intercom calls.

During a call, press **BOOST** to increase the audio volume.

While audio boost is on,  appears in the display.

Press **BOOST** again to turn off.

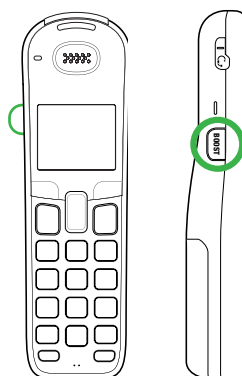


5 Using the Do Not Disturb function

The Do Not Disturb function turns off the audio ringers for the base and any connected handsets. It does not affect the visual ringers.

To activate, press and hold (for at least 2 seconds) the **DO NOT DISTURB** button on the base. The **DO NOT DISTURB** button on the base glows red and the display shows **DO NOT DISTURB** on handset. While DO NOT DISTURB is active, the phone automatically turns on the answering system.

To cancel, press the **DO NOT DISTURB** button again.

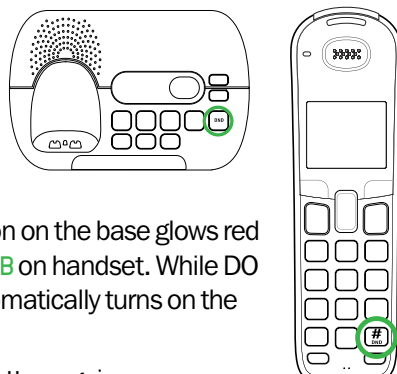


4 Adjusting the visual ringer

The visual ringer switch is located on the side of the charger base. Use this switch to change the brightness of the visual ringer on both base and handset.

Slide the switch so the centre lines up with the preferred brightness option (**HIGH**, **LOW** or **OFF**).

 The visual ringer does not affect the audio ringer volume.




6 Finding a lost handset

On the charger base, press **FIND**. All connected handsets will beep for one minute.

To stop paging

From the base, press **FIND** again.

From the handset, press **any button**.

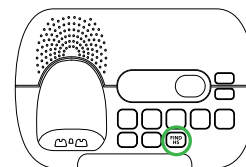


BASIC USER GUIDE

7 Using the answering system

FROM THE CHARGER

Record your own message

- 1 Press and hold **GREET** until you hear the system say "RECORD GREETING" (about 2 seconds)
 - 2 Wait until the system beeps, then begin speaking. Your message may be up to 30 seconds long. The message counter light counts down from 30 to show available time
 - 3 When finished, press **GREET** again The system plays back your new message
- To keep this message, do nothing
- To re-record the message, go back to step 1

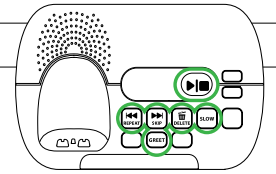

Play a message

Press **▶|■**

The system announces the number of new and old messages
The first new message then plays, followed by the day and time it was received

Restart message

While the message is playing, press **◀◀ REPEAT**

Replay previous messages

To return to an earlier message, press **◀◀ REPEAT** repeatedly until you hear the message you want to replay

Delete a message

While the message is playing, press **🗑️ DELETE**

Play old messages

Once all new messages have been played, press **▶|■** again to access old messages
Please note, once you have Deleted a message it can not be retrieved

Exit the answering machine

Press **▶|■**

To use the answering machine from your handset, please see page 25 of the Owner's Manual

This Basic User Guide is designed to help with the basic operation of your telephone. For more information on all other features and functions, please refer to the Owner's Manual supplied with the product.

Attaching the belt clip to the handset	page 9
Using your numeric keypad to enter words	page 14
Storing phone numbers in the 'Phonebook'	page 17
Transferring calls between telephones or using the intercom	page 21
Using the 'Text-To-Speech' function	Page 19
Using the answering machine from your handset	page 25
Using the answering machine while you are away from home	page 28
General problem solving	page 29